

Life Cycle LC9500HR - LC95-0XXX-11 General Assembly

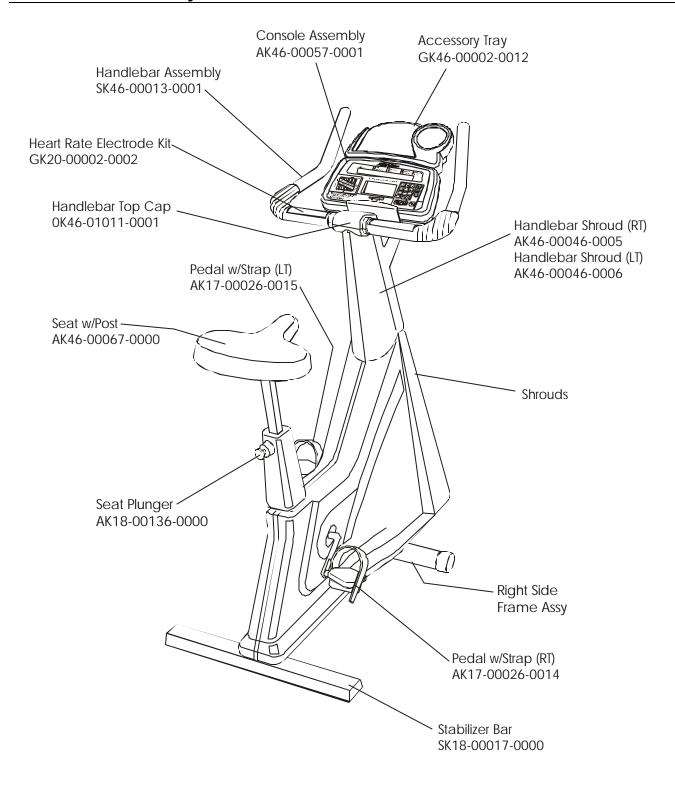



NOTE: Installation Instructions MO51-00K20-A287, Operator Manual M051-00K20-B125, Service Manual M051-00K46-B004, and Hardware Kit AK46-00065-0000.

Life Cycle LC9500HR - LC95-0XXX-11 Right Side Frame

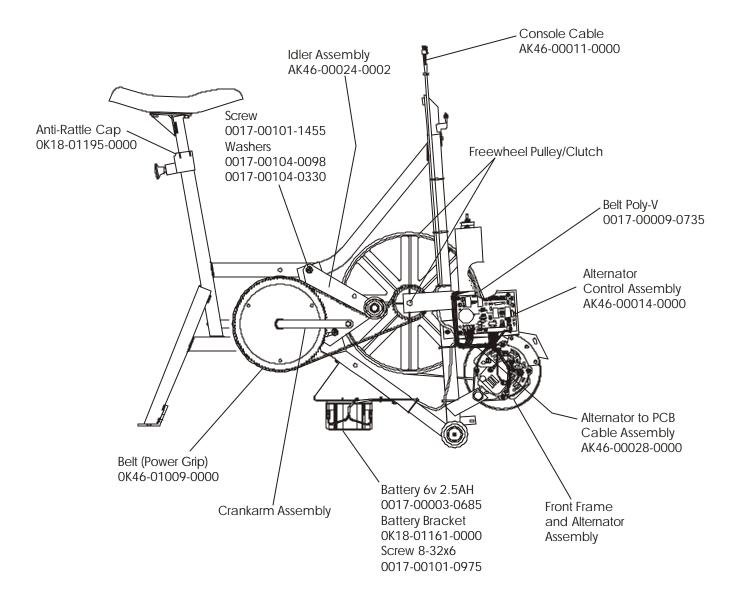


Life Cycle LC9500HR - LC95-0XXX-11 Shrouds/Stabilizer Bar

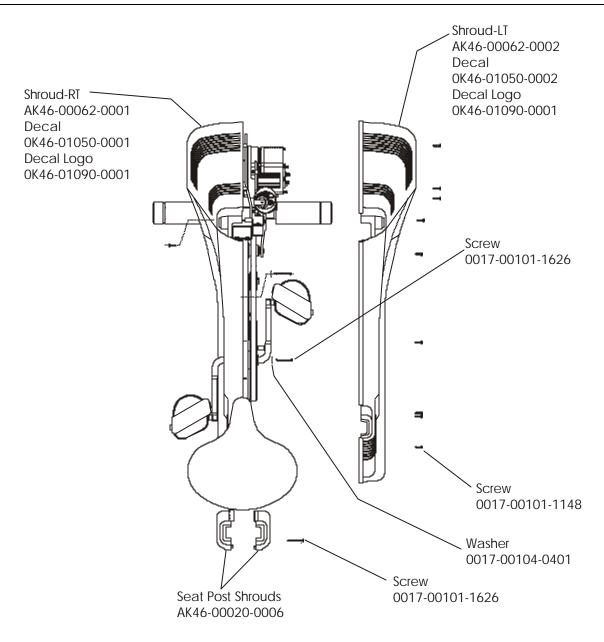


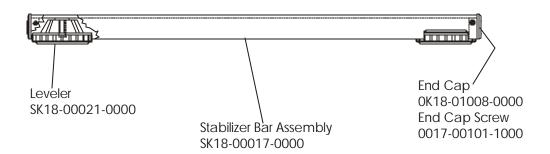


Life Cycle LC9500HR - LC95-0XXX-11 Front Frame Assembly

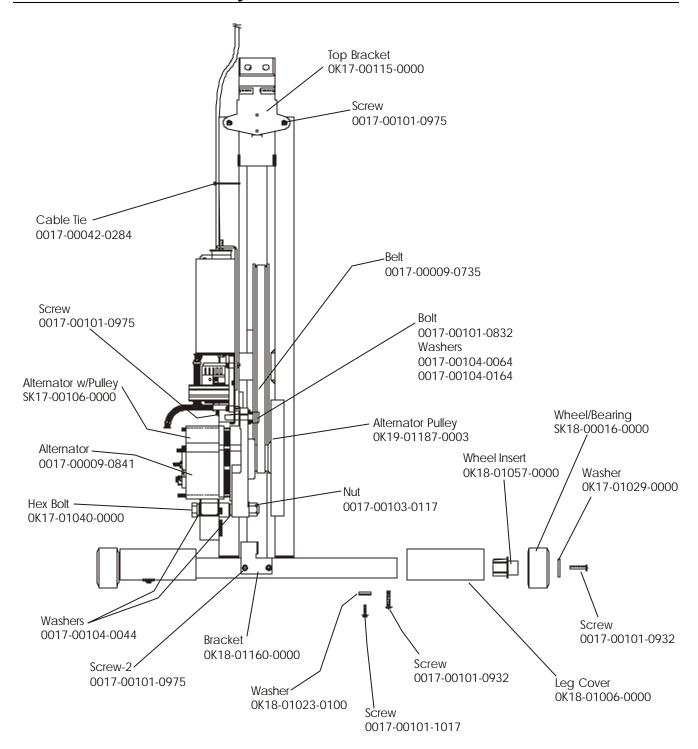


Life Cycle LC9500HR - LC95-0XXX-11 Console Assembly

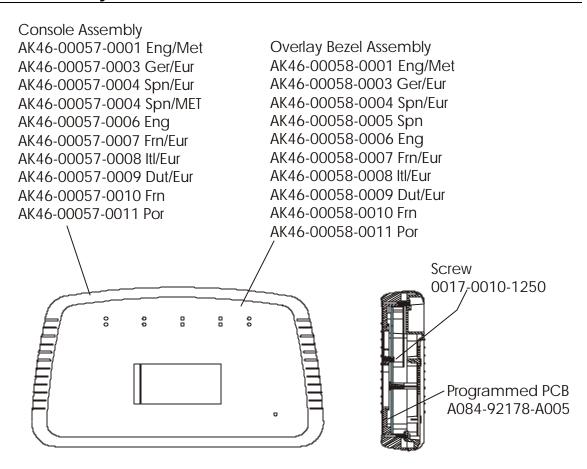


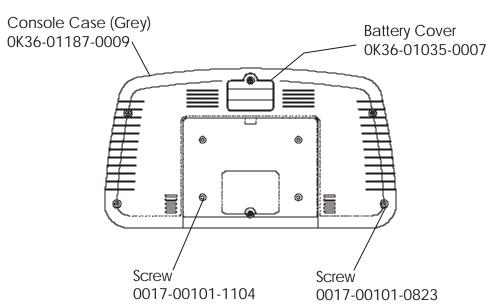


Tray Kit GK46-00002-0012

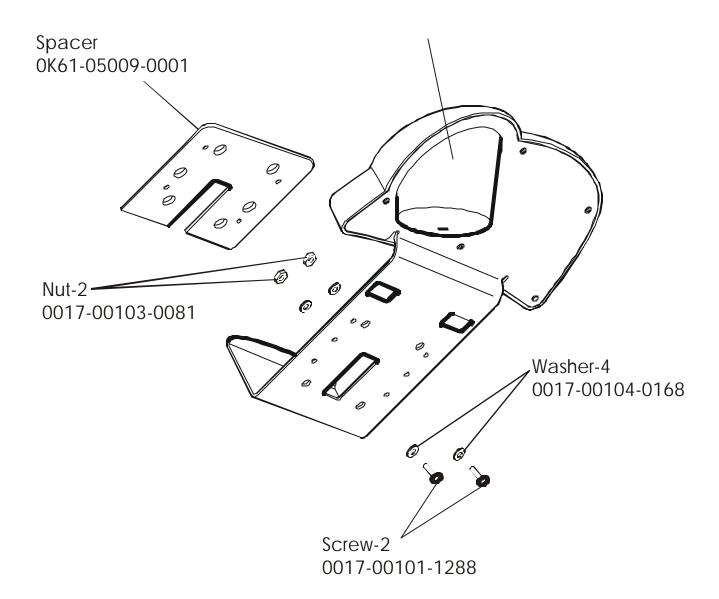

Life Cycle LC9500HR - LC95-0XXX-11 Handlebar Assembly

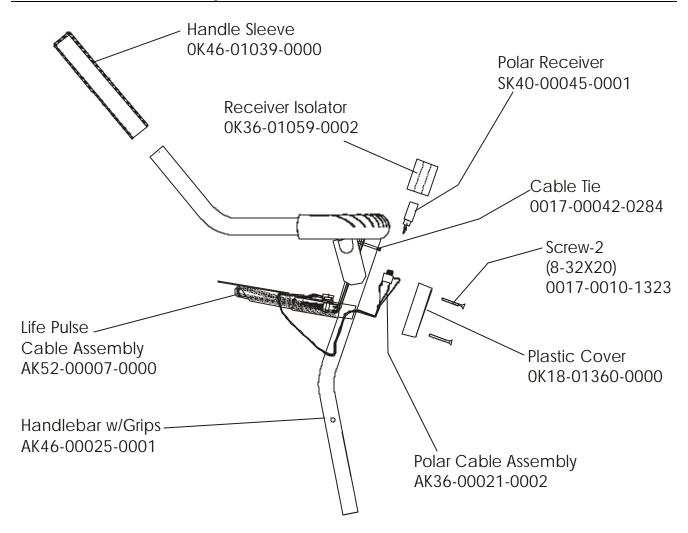


Life Cycle LC9500HR - LC95-0XXX-11 Crankarm Assembly

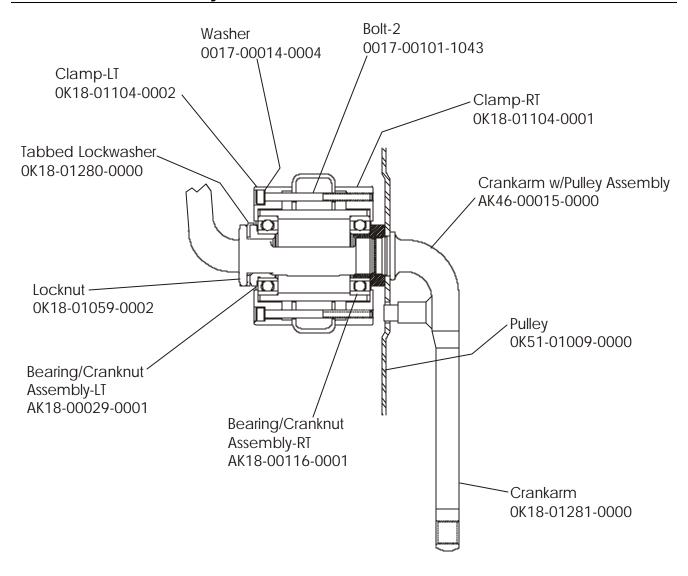


Note: Bearing Kit Number GK18-00004-0023


Life Cycle LC9500HR - LC95-0XXX-11 Freewheel Pulley/Clutch Assembly

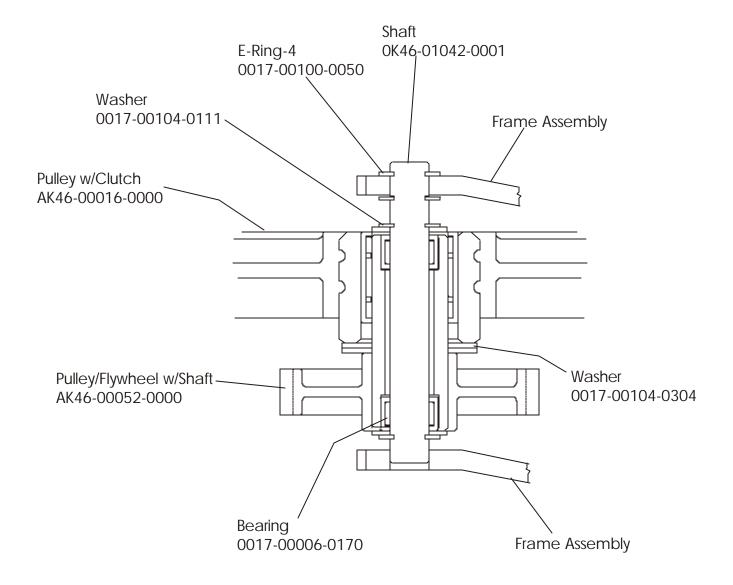


Life Cycle LC9500HR - LC95-0XXX-11 Idler Arm Assembly - AK46-00024-0002

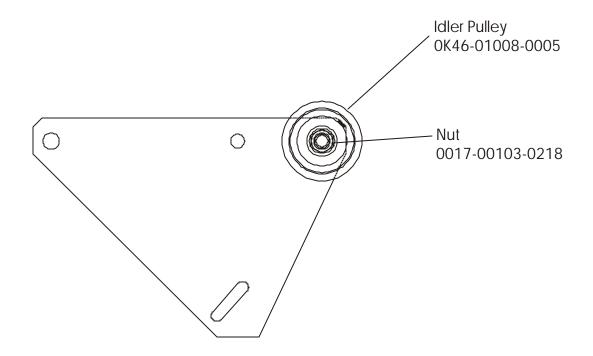

Life Cycle LC9500HR - LC95-0XXX-11 Seat/Seat Post Assembly - AK46-00067-0000

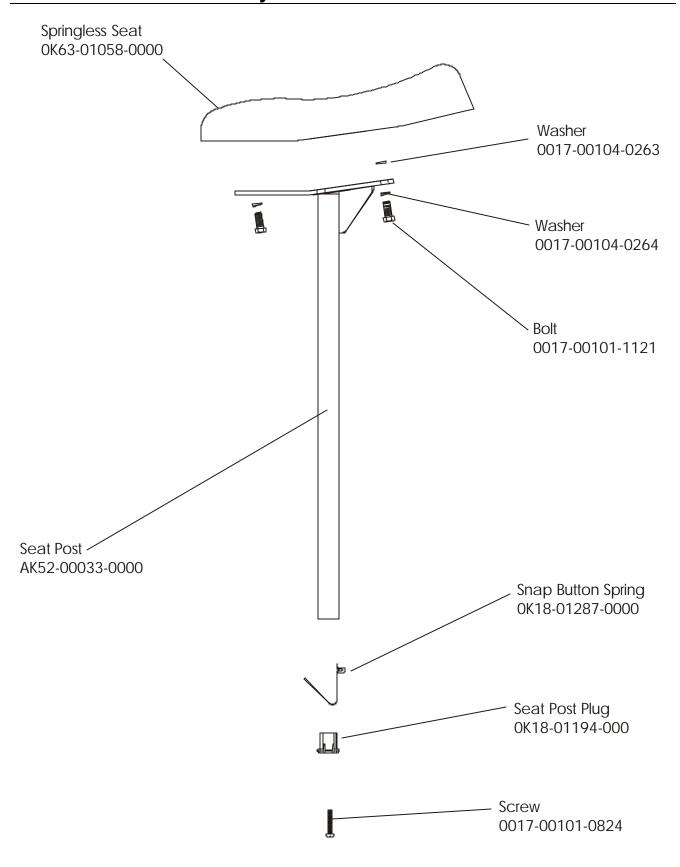

Life Cycle LC9500HR - LC95-0XXX-11 Seat Plunger Assembly - SK18-00136-0000

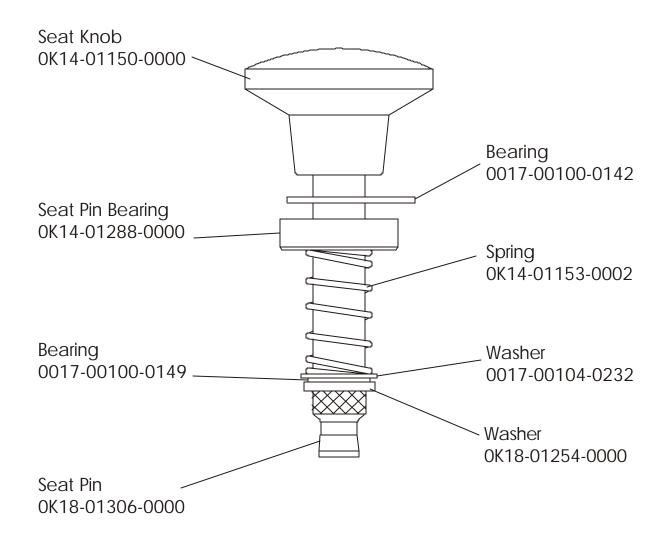

Life Cycle LC9500HR - LC95-0XXX-11 Alternator Control Assembly - AK46-00014-0000

